

# System Requirements

---

- 1GHz or higher CPU
- 1GB or more RAM
- Hard disk with 2GB or more spare space
- USB 2.0/3.0

**The software supports the following operating systems:**

- Microsoft Windows Vista
- Microsoft Windows 7
- Microsoft Windows 8
- Microsoft Windows 10

*If the operating system is lower than the above version, please update the system first.*


## Installation

---

1. Insert the installation CD into the CD-ROM of a computer.
2. The installation interface pops up. (If no installation interface appears, double-click Setup.exe in the CD-ROM directory to start it manually.)

# Using the Software

## 1. Interface

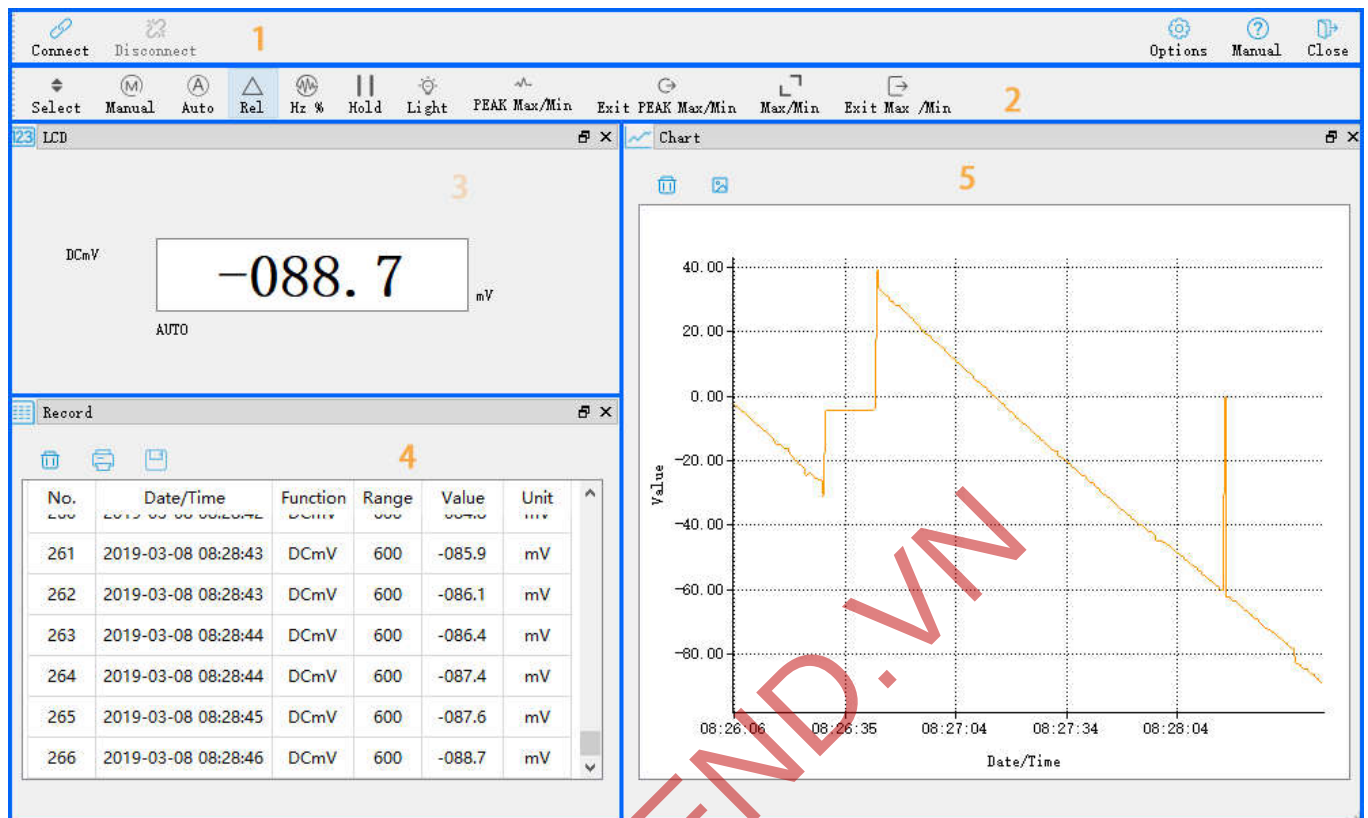

| Area | Description           |
|------|-----------------------|
| 1    | Toolbar               |
| 2    | Control commands      |
| 3    | Real-time measurement |
| 4    | Data records          |
| 5    | Data chart            |

## 2. Connect device

- Click  to connect the device.
- If the connection is successful, the measurement data will be displayed in Area3, Area4 and Area 5.

## 3. Disconnect device

- Click  to disconnect the device.

- Each area will stop displaying measurement data

## 4. Export


- Click  to export the data record to an Excel file

## 5. Clear data

- Click  to clear the recorded data.

## 6. Setup software

- Click  Options to open options dialog

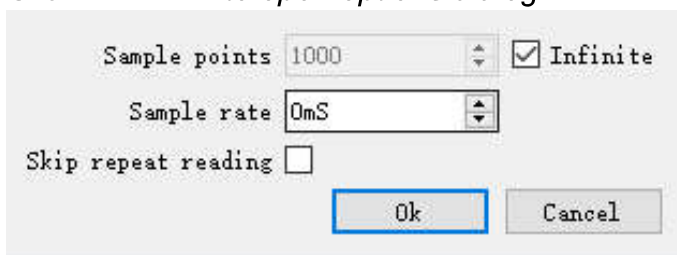

The Options dialog box contains the following settings:

- Sample points: 1000 (with a spin button) and ☒ Infinite
- Sample rate: 0mS (with a spin button)
- Skip repeat reading: ☐
- Buttons: Ok and Cancel

- “Sample Points”: Set the number of sampling points. If “Infinite” is checked, the number is unlimited
- “Sample rate”: Set the sampling rate. If the set rate is greater than the actual rate, the actual rate will prevail; if set to 0, the actual rate will be sampled
- “Skip repeat reading”: If checked, the same sample value as the previous one is not recorded

## 7. Get help

- Click  Manual to open the “Software user manual”

## 8. Close the software

- Click  Close to close the software