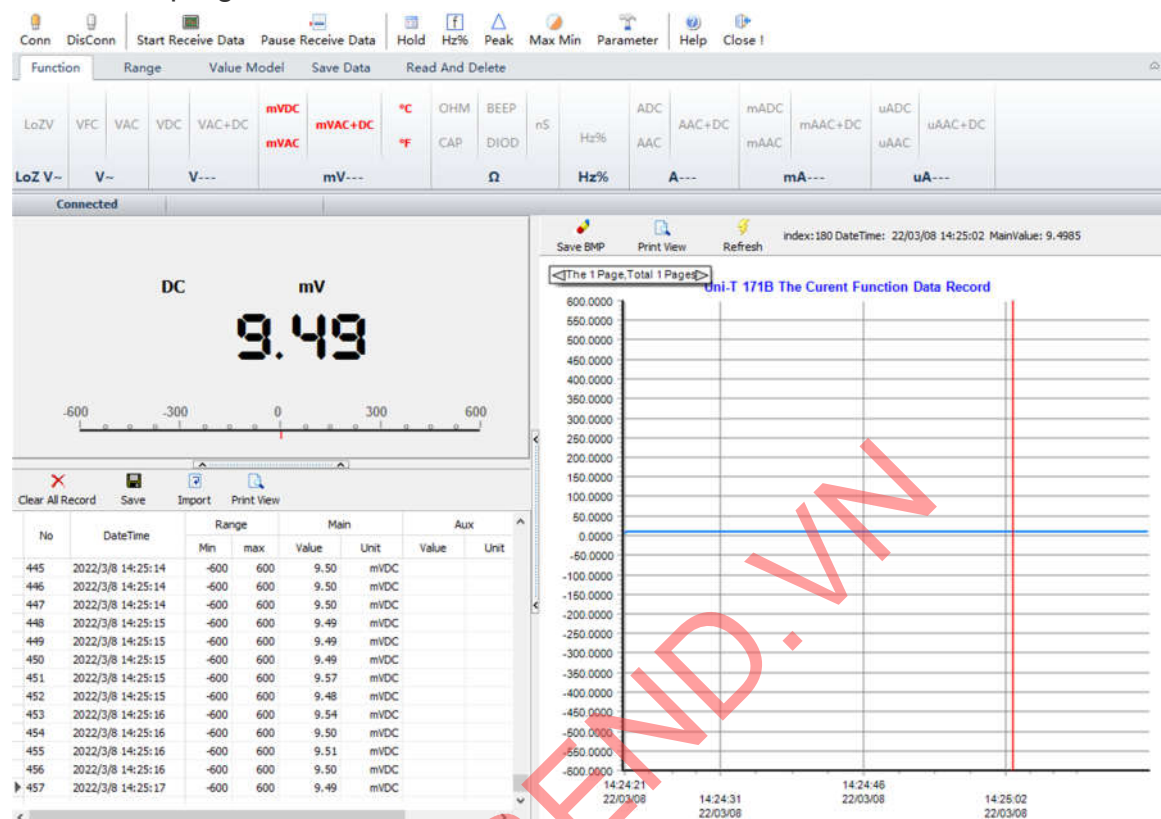

 

 
 
 






 
 
## Manual of Operation

### The main program interface

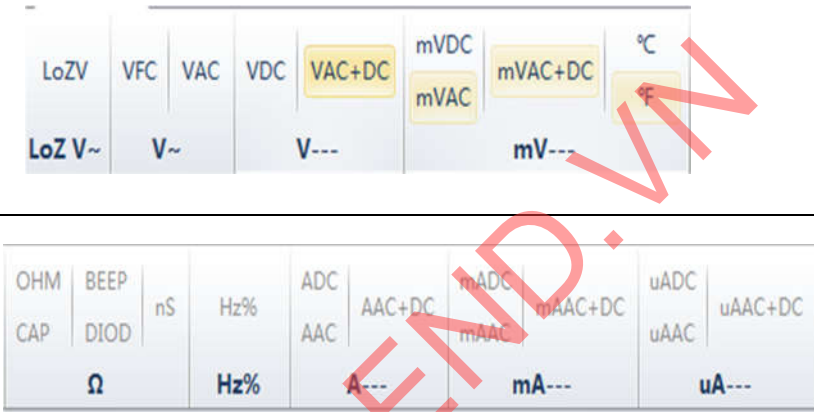
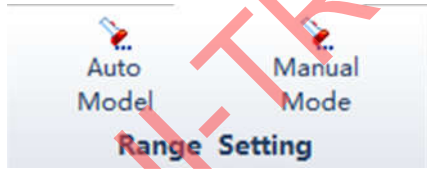
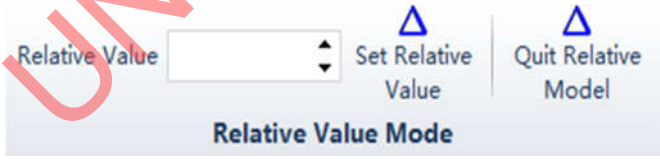
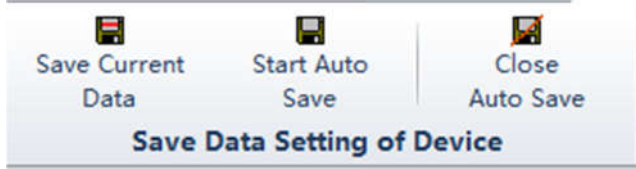
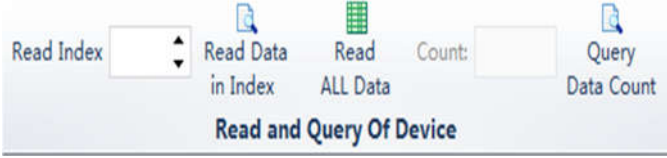



#### 1 The shortcut toolbar

	Connecting devices
	Disconnect the device
	To receive data, receiving continuous data
	Suspension of receiving data
	Maintain current data.
	Trigger the HZ function
	To enter peak mode
	Enter the max min mode
	Set system parameters

	Software product information
	Software to help document
	Exit the software

## 2 Function Options

Menu	Screenshot	Description
Function		The corresponding instrument with the shift function
Range		Enter the instrument automatic or manual range
Value Model		To enter or exit the relative value model
Save Data		To enter or exit the saved data model
Read And Delete		Read or query the historical data model

		Delete some or all of the historical data
--	--	--

3 Command prompt bar: Send status command prompt

4 Instrument display area: Synchronous display instrument value

5 Table display area: The table displays the received data,  
provide the import, export, printing function。

6 Chart display area: The chart shows the received data, provide the save  
BMP image, refresh, print the image function。

UNI-TREND.VN