

Thank you for purchasing the new 360° Rotatable Industrial Borescope. In order to use this product safely and correctly, please read this manual thoroughly.

PREFACE

After reading this manual, it is recommended to keep the manual at an easily accessible place, preferably close to the device, for future reference,

LIMITED WARRANTY AND LIABILITY

Uni-Trend guarantees that the product is free from any defect in material and workmanship within one year from the purchase date. This warranty does not apply to damages caused by accident, negligence, misuse, modification, contamination and improper handling. The dealer shall not be entitled to give any other warranty on behalf of Uni-Trend. If you need warranty service within the warranty period, please contact authorized service center or send the product back with problem description.

warranty is the only compensation you can obtain. Uni-Trend will not be responsible r any special, indirect, incidental or subsequent damage or loss caused by any reason Please charge the device via the home charger (5V=1A, 5V=2A) or speculation. As some areas or countries do not allow limitations on implied warranties and incidental or subsequent damage, the above limitation of liability and stipulation may meets safety rules.

Safety & Maintenance

- Do not hit the Lens violently. Do not pull the cables so hard.
- Be careful to use the device in somewhere rough and uneven. and avoid scratching the waterproof layer of probe.
- The Lens probe is not made from heat-resistant materials, so please cool down the temperature of engine to be normal when


Keep the Lens and device clean and dry when not using, to

medical use or body check.

- avoid contacting any oil contaminations or other corrosives.
- The product is not suitable for users who are limited in body health, sensory ability or spirit ability.
- Do not let children contact and operate the device.
- Do not disassemble the device randomly and contact sellers for maintenance service if any damaged.
- The product is for industrial borescope use, and not suitable for

Functions

- The device is supported to be used in the charging process.
- When the device is not used for a long time, charge it at least once every three months, to avoid unrecoverable damage caused by over-discharge.

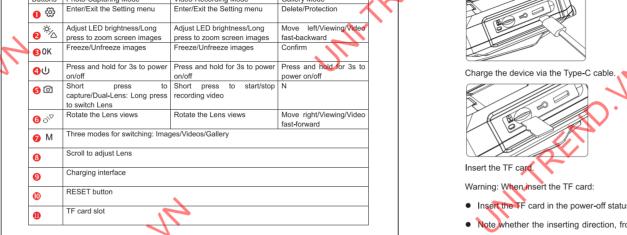



Long press "U" button for 3s to power on/off.

· · · · · · · · · · · · · · · · · · ·	·	
D brightness/Long	Move left/Viewing/Video	
coom screen images	fast-backward	
nfreeze images	Confirm	
d hold for 3s to power	Press and hold for 3s to	Character during via the Tarac Comble
	power on/off	Charge the device via the Type-C cable.
ress to start/stop video	N	
e Lens views	Move right/Viewing/Video fast-forward	
/Gallery		
		Insert the TF card.
		Warning: When insert the TF card:
		Insert the TF card in the power-off status.
		- most are an early many power on status.
		Note whether the inserting direction, front and back side of TF

card is correct or not.

Lens equips a temperature control sensor

Lens alarms in 75°C

Lens stops running and screen off in 85°C

The default language is English. The system supports Simplified Press "M" to switch to the Gallery and select the images or videos Chinese, Japanese, English, Korean, French, German, Italian, to view. Press "®" to delete images or videos.

Images & Videos Copy

Copy directly via the TF card reader, or connect to computer to copy via the Type-C cable.

Enter the Gallery

Press UP and DOWN button to select the language

①. Press "變" button to enter the Setting page.

Lens runs normally in 70°C or below

Language Settings

Spanish, Russian and Polish,

Select the Language Setting.

Press OK button to save it.

Do not violently insert or pull out the TF card to avoid card slot

In the copy process, please re-power on the device or re-plug the Press "M" to switch to the Photo-Capturing or Video-Recording Type-C cable when the connection between device and computer

Press "o" to capture or record.

Charging Guideline

1. Charge the device via the Type-C USB adapter (5V=1A, 5V=2A), and fast charge is not supported.

2. 1) In power-on charging, the battery icon shows in green with

lightning sign. In power-off charging, the battery icon shows in step by step.

The image output is freezing up

Check the battery status of device, or re-power on the device.

Machine crash, image output failed or screen off

Press the RESET button on the right side of device, or re-power on

The optimum imaging focus is 2cm-10cm, please align the device with the target, or use a clean alcohol cloth to wipe the front-end of

the device.

3) Unclear imaging

Please charge the device via the (5V=1A, 5V=2A) charger, and fast ✓

Specification

The Lens overheat phenomenon is commonly seen, especially the highest LED brightness, but without affecting the normal use service life.

6) TF card fails to identify

Check whether the TF format is FTA32 or not, not formatting. Please re-insert the TF card when it fails to identify.

Accessories

360° Rotatable Industrial Borescope User Manual

32GB-TF Card

Lens overheated

System	OUICCIT OILC				
Cyclom	System Languages	Simplified Chinese, Japanese, English, Korean, French, German, Italian, Spanish, Russian, Polish			
	Image Pixels	JPG:1920*1080			
	Video Pixels	AVI: 1920*1080			
		Photo-capturing, Video-re	ecording, Playback, Hig	n temperature warning	
	Basic Functions	protection, Image rotation, Audio recording			
	Storage	Standard 32GB-TF (maximum 64GB)			
Hose	Rotational Angle	180° Bi-directional			
	Hose Material	Medal and hard hose			
	Hose Length	1m	2m	3m	
Lens	Lens Diameter	8mm			
	Light Sensor Chip	CMOS			
	Field of View (FOV)	70°			
	Depth of Field				
	(DOF)	20~100mm			
	Adjustable LED	4-Setting, 8 LEDs			
	Lights	4-Setting, 6 LEDS			
	Pixels	1000K			
~	IP Rating	IP67			
Battery	Battery	3.7V/3000mAh			
Battery Life 4h					
Working	Lens Temperature	0°C~80°C			
0 1111	Working				
Conditions	Temperature	0°C~45°C			
	Humidity	<90%RH, No condensation	on		

The manual is subject to change without prior notice!

Due to different batches, the materials and details of actual products may be slightly different from the graphic information, please refer to the actual product received. Experimental data provided in the page is from internal laboratory of UNI-T, but it should not be a reference for customer to place orders. Any questions, please contact the customer service, thanks!

No.6. Gong Ye Bei 1st Road.

Songshan Lake National High-Tech Industrial Development Zone, Dongguan City Tel: (86-769) 8572 3888

charge is not supported.

failed Do not unplug the Type-C cable during the data

transmission, otherwise it will be failed.

http://www.uni-trend.com

UNI-TREND TECHNOLOGY (CHINA) CO., LTD.